

MODEL A COTTER PIN USAGE CHART

<u>Qty.</u>	<u>Location</u>	<u>Qty.</u>	<u>Location</u>
1/16 X 1/2"		3/32 X 3/4"	
4	Equalizer operating shaft pin cap - 28 only	2	Operating wedge stud assy
4	Brake cross shaft frame bracket	2	Brake cross shaft guide - 28 only
2	Hand brake lever bracket - 28 only	2	Spindle bolt locking pin - 29/29 only
1	Hand brake lever retract spring - 28 only	2	Spindle connecting rod end
6	Rear engine support pads	1	Steering gear housing bolt
3/32 X 1/2"		1	Steering gear arm
1	Hand brake lever pawl - 28 only	1	Fan shaft
1	Hand brake lever rod	6	Main engine bearings
1	Hand brake lever pawl pin - 28/29 only	1	front engine support
1	Front radius rod retaining pin	8	Front and rear spring shackles
1	Clutch pedal shaft collar pin	4	Rear bolts on rear radius rod
3/32 X 5/8"		1/8 X 3/4"	
3	Front brake plate assembly	16	Brake shoe roller pins
2	Emergency brake toggle connection link	8	Rear brake plate assembly
1	Hand brake lever arm - 28 only	3/32 X 1"	
1	Hand brake lever sector	2	Front radius ball cap
1	Hand brake lever arm - 28 only	1/8 X 1"	
5	Universal joint outer cap	2	Front spring perch
1	Tail pipe clamp	2	Spindle arm
8	Engine connecting rods	2	Rear axle and gear shaft
1	Throttle bell crank	1	Rear radius rod - front bolt
4	Shock arm bolts	4	Rear spring retaining bar
1/8 X 5/8"		1	Starter rod - 28 only
1	Brake pedal to equalizer shaft - 28 only	5/32 X 1"	
1	Brake pedal clevis pin	2	Spindle assembly
1	Brake pedal rod to cross shaft	1/8 X 1-1/4"	
8	Brake rod adjusting clevis	2	Side mount arm support
1	Hand brake lever pawl pin	4	Shock link plug
2	Emergency brake lever to cross shaft rod	1/8 X 1-1/2"	
1	Emergency brake cross shaft to rear end	2	Spindle connecting ball plug
1	Cutch pedal to release shaft arm trunion	2	Drag link ball plug
		2	Transmission main drive gear - 28 only